

Hand Valve

VH Series



Specifications

Fluid		Air
Proof pressure		1.5 MPa
Max. operating pressure	VH200/300/400	1.0 MPa
	VH600	0.7 MPa
Ambient temperature and operating fluid temperature		-5 to 60°C (No freezing)
Operating angle		90°
Lubrication		Not required (Use turbine oil Class 1 ISO VG32, if lubricated.)

Model

The value in brackets refers to the port size.

Series	Port size	Number of positions	Piping direction	Model		Flow rate characteristic						Weight (kg)		
				Body mount	Panel mount	1(P)→2(A)/4(B)			2(A)/4(B)→3(R)					
						C[dm³/(s·bar)]	b	Cv	C[dm³/(s·bar)]	b	Cv			
VH2	1/4	3 (Closed center)		VH200-02	VH210-02	1.5	0.25	0.38	1.5	0.25	0.38	0.42		
		3 (Exhaust center)		VH201-02	VH211-02									
		2 (Position)		VH202-02	VH212-02									
		3 (Closed center)		VH240-02	VH250-02	1.1	0.2	0.28	1.1	0.2	0.28			
		3 (Exhaust center)		VH241-02	VH251-02									
		2 (Position)		VH242-02	VH252-02									
		3 (Closed center)		VH220-02	VH230-02	1.1	0.2	0.28	1.1	0.2	0.28			
		3 (Exhaust center)		VH221-02	VH231-02									
		2 (Position)		VH222-02	VH232-02									
VH3	1/4, 3/8	3 (Closed center)		VH300-02/03	VH310-02/03	5.4(1/4)	0.25	1.25(1/4)	5.4(1/4)	0.25	1.25(1/4)	0.71		
		3 (Exhaust center)		VH301-02/03	VH311-02/03	6.4(3/8)		1.5(3/8)	6.4(3/8)		1.5(3/8)			
		2 (Position)		VH302-02/03	VH312-02/03	4.5(1/4)		1.1(1/4)	4.5(1/4)		1.1(1/4)			
		3 (Closed center)	VH320-02/03	VH330-02/03	1.3(3/8)			5.3(3/8)	1.3(3/8)					
		3 (Exhaust center)		VH321-02/03	VH331-02/03	0.2	1.1(1/4)	4.5(1/4)	1.1(1/4)					
		2 (Position)		VH322-02/03	VH332-02/03		1.3(3/8)	5.3(3/8)	1.3(3/8)					
		3 (Closed center)			VH400-02 to 06		VH410-02 to 06	14.3(1/4)	0.25	3.4(1/4)	14.3(1/4)		3.4(1/4)	
		3 (Exhaust center)	VH401-02 to 06		VH411-02 to 06	15.6(3/8)	3.8(3/8)	15.6(3/8)		3.8(3/8)				
2 (Position)	VH402-02 to 06	VH412-02 to 06	17.5(1/2)		4.3(1/2)	17.5(1/2)	4.3(1/2)							
VH4	1/4 to 3/4	3 (Closed center)		VH420-02 to 06	VH430-02 to 06	11.9(1/4)	0.2	2.9(1/4)	11.9(1/4)	0.2	2.9(1/4)	1.28		
		3 (Exhaust center)		VH421-02 to 06	VH431-02 to 06	13.0(3/8)		3.1(3/8)	13.0(3/8)		3.1(3/8)			
		2 (Position)		VH422-02 to 06	VH432-02 to 06	14.6(1/2)		3.5(1/2)	14.6(1/2)		3.5(1/2)			
		3 (Closed center)		VH400-02 to 06	VH410-02 to 06	15.4(3/4)	0.25	3.7(3/4)	15.4(3/4)	3.7(3/4)				
		3 (Exhaust center)		VH401-02 to 06	VH411-02 to 06	10.2(3/4)		3.4(1/4)	10.2(3/4)	3.4(1/4)				
		2 (Position)		VH402-02 to 06	VH412-02 to 06	10.5(1)		3.8(1/4)	10.5(1)	3.8(1/4)				
		VH6	3/4, 1	3 (Closed center)		VH600-06/10	—	37(3/4)	0.25	37(3/4)	0.25		10.2(3/4)	9.7
				3 (Exhaust center)		VH601-06/10		38.8(1)		10.5(1)			38.8(1)	
2 (Position)	VH602-06/10													

How to Order

VH **2** **4** **1** - **02** - -

Hand valve

Body size (Base size)

2	1/4 base
3	3/8 base
4	1/2 base
6	1 base

Made to Order

Nil	Standard
X116	Handle (Red)

Suffix symbol

Symbol	Description	Body size			
		VH2	VH3	VH4	VH6
Nil	Standard	●	●	●	●
L	Long handle	—	●	●	—
R	Handle position 180° change	●	●	●	●

* When specifying more than one option, indicate symbols alphabetically.
 * Note that 1 (P) port of VH600 is located on handle side as standard.

Port size (Nominal size)

Symbol	Port size (Nominal size)	Body size			
		VH2	VH3	VH4	VH6
02	1/4	●	●	●	—
03	3/8	—	●	●	—
04	1/2	—	—	●	—
06	3/4	—	—	●	●
10	1	—	—	—	●

Thread type

Nil	Rc
N	NPT
F	G

Function

 
0	3 position closed center
1	3 position exhaust center
2	2 position

Symbol	Mounting method	Piping			
		VH2	VH3	VH4	VH6
0	Body				
1	Panel mount				—
2	Body				—
3	Panel mount				—
4	Body		—	—	—
5	Panel mount		—	—	—


Note) For VH600, 3(R) port is located only on the bottom.

Symbol


2 position



Closed center

 


Exhaust center




 


Handle Operation Angle and Air Flow Direction

(Refer to the figures of piping direction to the right.)

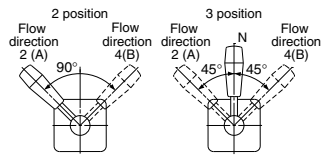



Flow Rate Characteristics

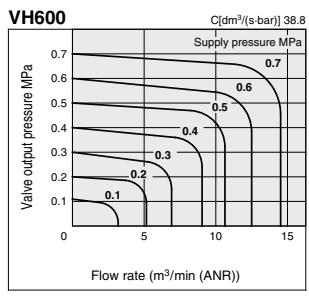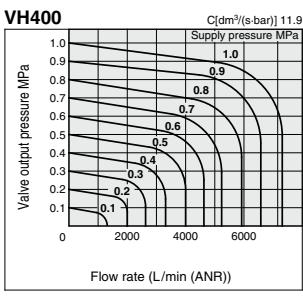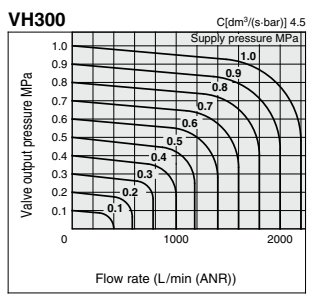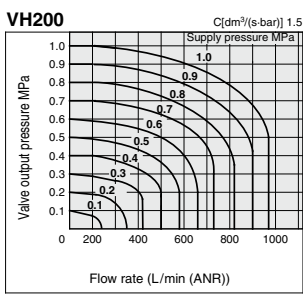



- VM
- VMG
- VR
- VR51
- VHK
- VH
- VHS
- VHS

Construction



VH200

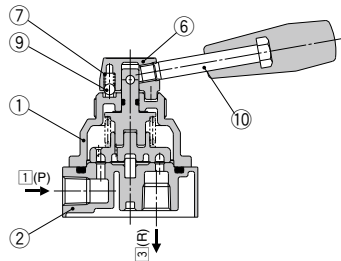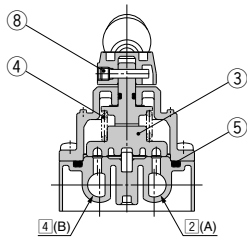

VH300/400

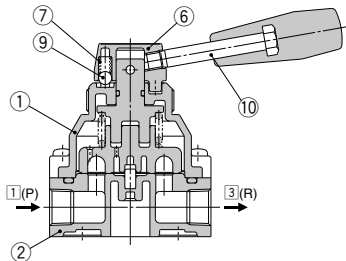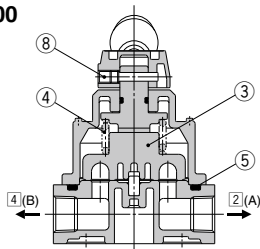

VH600

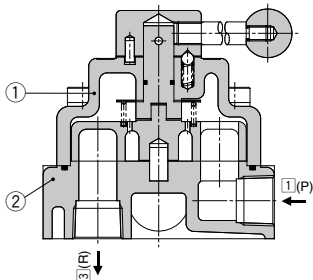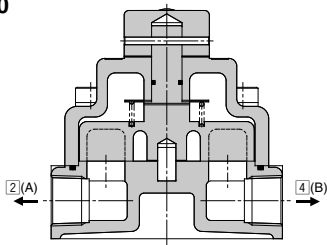

Component Parts

No.	Description	Material	
		VH200/300/400	VH600
1	Cover	Zinc die-casted	Cast iron
2	Body	Aluminium die-casted	Cast iron

Replacement Parts

Description	No.	Component parts	Material	Part no.		
				VH200	VH300	VH400
Maintenance and repair kit *	3	Slide ring	Resin	KT-VH2□□-N	KT-VH3□□-N	KT-VH4□□-N
	4	Slide ring spring	Piano wire			
	5	O-ring	NBR			
Handle head assembly *	6	Handle head	Zinc alloy	24403A	24413A	24413A
	7	Spring	Piano wire			
	8	Pin	Structural steel			
	9	Steel ball	SUJ			
Handle head assembly *	6	Handle head	Zinc alloy	244036A	244125A	244125A
	7	Spring	Piano wire			
	8	Pin	Structural steel			
	9	Steel ball	SUJ			
Handle	10	Handle	—	244032 — 244035	244032 244127 244035	244032 244223 244035
		Standard				
		Long type				
		Red				

Note) Replacement parts for the VH600 series are not available.

* Including grease.


Part No. of Lock Nut for Panel Mount

Series	Part no.
VH200	244010
VH300	24418
VH400	240258


Note) Not applicable to the VH600 series.

Dimensions


VH20□/21□-02

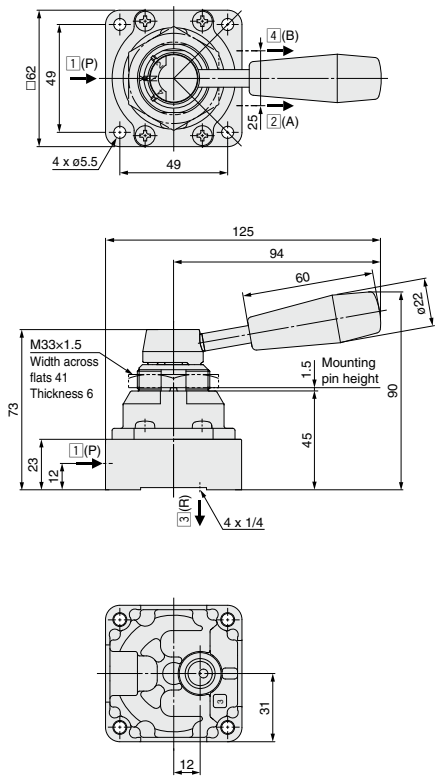


VH24□/25□-02

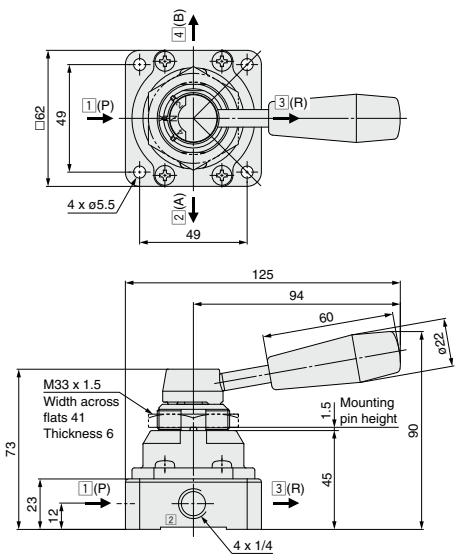

VH22□/23□-02
(Bottom ported)

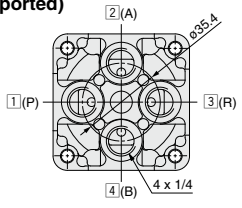

Panel cut dimension

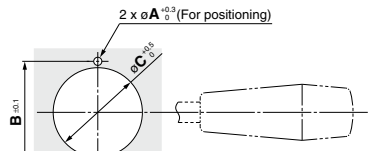

Max. panel thickness D


	(mm)			
	A	B	C	D
VH200	3.2	40	35	3.5
VH300	3.2	51	41	6
VH400	3.2	64	51	8

- VM
- VMG
- VR
- VR51
- VHK
- VH**
- VHS□
- VHS


Dimensions

VH30□/31□-02 to 03

(): Long handle type

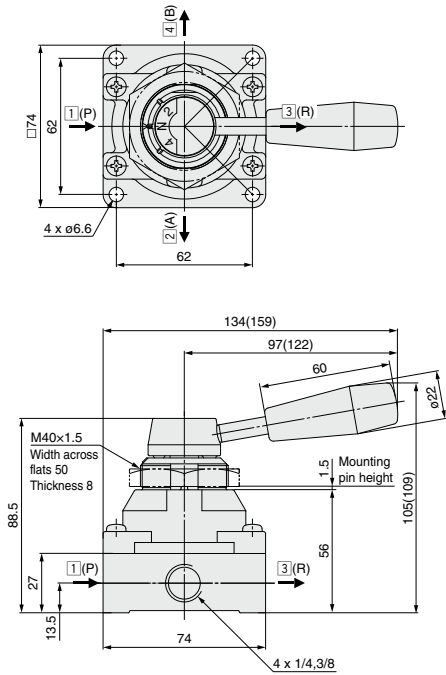

VH32□/33□-02 to 03
(Bottom ported)

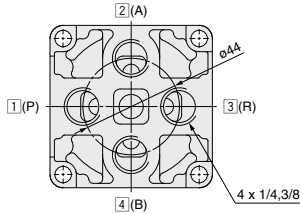


Refer to page 1699 for the panel cut dimension.

VM
VMG
VR
VR51
VHK
VH
VHS□
VHS

Dimensions


VH40□/41□-02 to 04

(): Long handle type

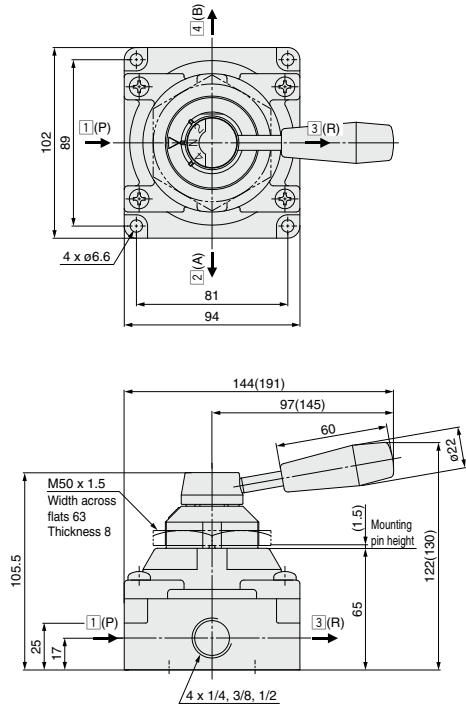


VH40□/41□-06


(): Long handle type

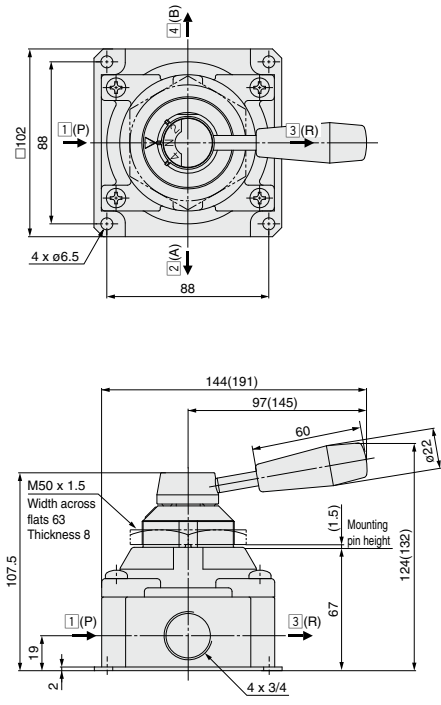

VH42□/43□-02 to 04 (Bottom ported)

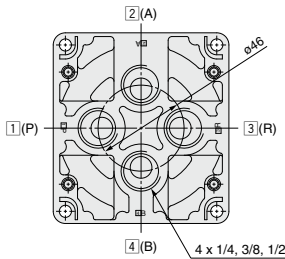


VH42□/43□-06 (Bottom ported)

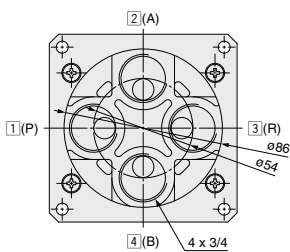

Refer to page 1699 for the panel cut dimension.

Dimensions: Body Mount

VH600-06/10

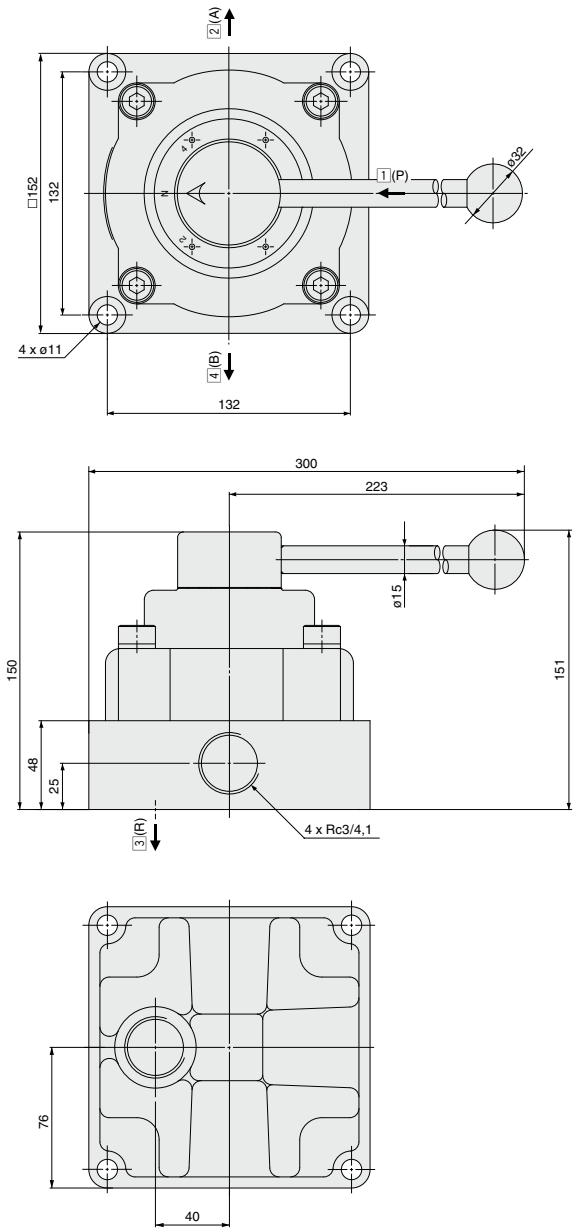

VM
VMG
VR
VR51
VHK
VH
VHS□
VHS